



 
目录 Contents

 
1




2

3

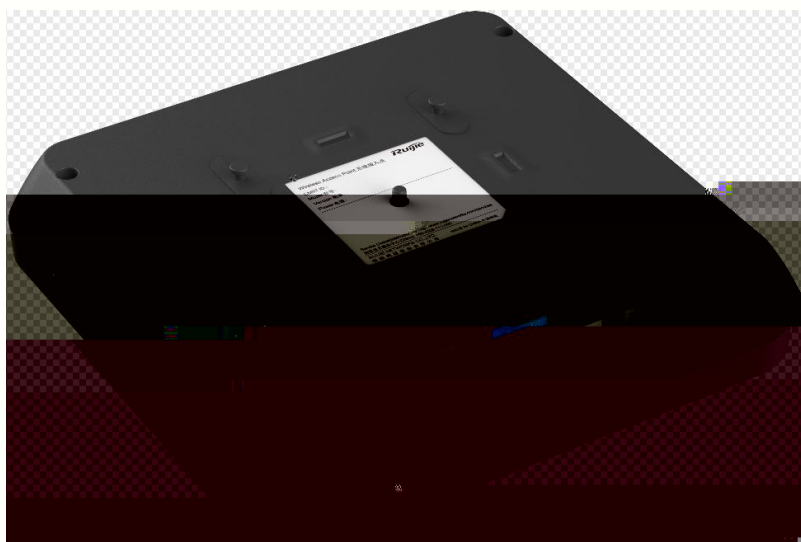



—	AP /	
3Hz	AP uboot	
—	AP	
3Hz	AP Link down	
—	AP CAPWAP	
3Hz	AP	
—	AP CAPWAP	
3Hz	AP CAPWAP	
3Hz 2 2	AP	

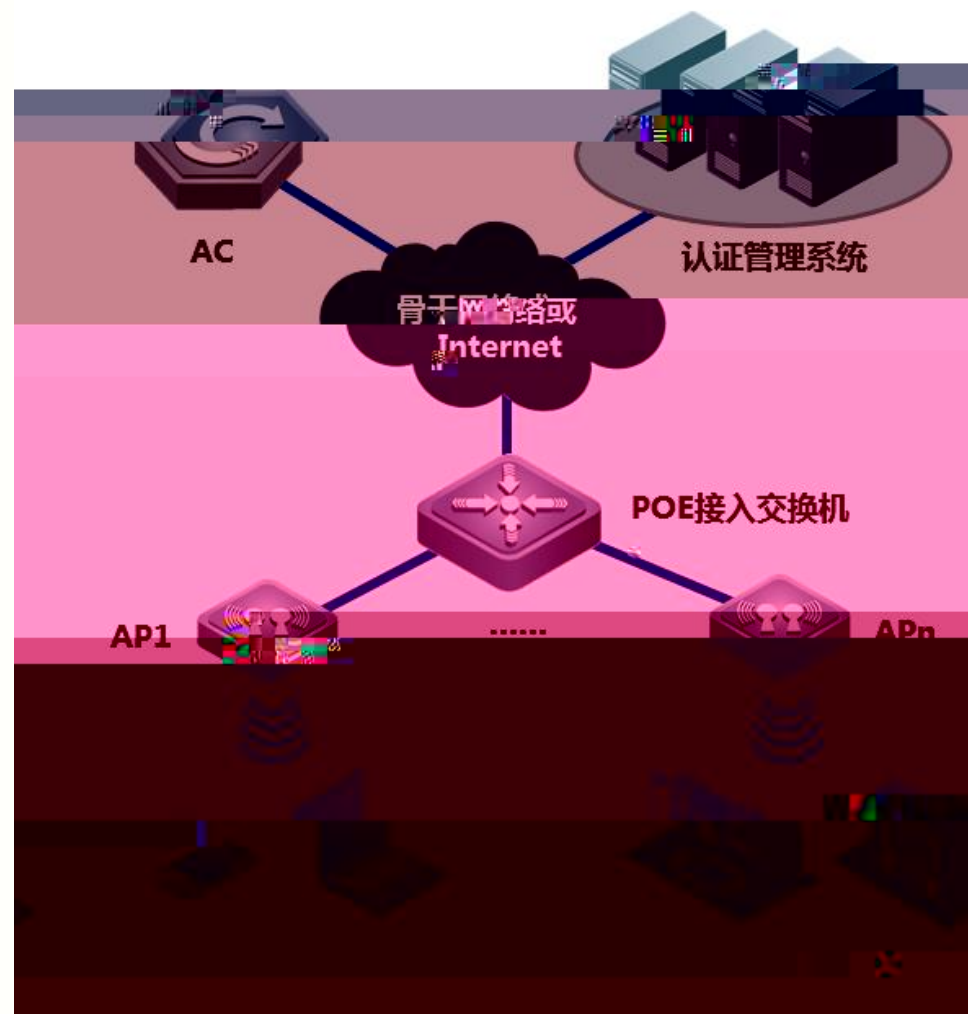 

目录 Contents

1

锐捷网络

2

3

	11axsupport enable
	no 11axsupport enable
	no 11ax
	Radio 11ax 11ax STA
	dot11radio

	long-gi { 0.8 1.6 3.2 }
	no long-gi
	no 11AX 0.8us
	0.8 OFDM 0.8us
	1.6 OFDM 1.6us
	3.2 OFDM 3.2us
	0.8us
	dot11radio

	ofdma enable
	no ofdma enable
	no ofdma
	dot11radio

目录 Contents

1

产品简介

2

常用功能配置

3

日常维护和问题排查

```
WS18000-1B11#show ac-config client | in mu
===== show sta status =====
AP      : ap name/radio id
Status: spend/Bond/Power-Save/Work-Mode/Beaming-Status/MU-MTMO... E - enable power-save, D - disable power-save

Online AP number: 33
Offline AP number: 156
```

Radio	Up/Off time	State	AP Name	IP Address	Mac Address	Radio
1 E 3 11 80 2 E 0 157 100	9:16:53:19 Run	192.18.57.219	172.18.57.219	5869.6e84.b2cc		
3 E 0 165* 100 4 N						

```
WS18000-1B11#show ac-config client | in mu
===== show sta status =====
AP      : ap name/radio id
Status: spend/Bond/Power-Save/Work-Mode/Beaming-Status/MU-MTMO... E - enable power-save, D - disable power-save

TotalSta.Num: 39
STA MAC      IPV4 Address      AP      wlan wlan Status      Asso Auth      Net Auth      Up time
-----
F48b.32a3.04e3      temp/2      6      1731      9.0M/E/ac/R/mu      MAB      WEB      0:20:37:33
WS18000-1B11#
```


RG-AP820

AP820-A(V3)

