Ruijie

RGOS®

RGNOS®

http://www.ruijie.com.cn/

http://webchat.ruijie.com.cn

http://www.ruijie.com.cn/service.aspx

7 × 24 4008-111-000

http://support.ruijie.com.cn

service@ruijie.com.cn

1

RG-WALL 1600-S3100

RG-WALL 1600-S3100 1-2 1~7

1-2 RG-WALL 1600-S3100

#	**LED**	**/**	
1	PWR		
2	STATUS		

3	USB MGMT	USB	USB
4	USB	USB	USB گ■ Ş ɢ

1~10

“ 3.8

1600-S3100

0

2-3

3.8cm

0ºC-40ºC	20%-

	mg/m^3	mg/m^3
	0.2	1.5
	0.006	0.03
	0.04	0.15
	0.05	0.15
	0.01	0.3

2.2.5

RG-WALL 1600-S3100

RG-WALL 1600-S3100 100-240 VAC, 50-60 Hz

2.2.6

RG-WALL 1600-S3100

2.2.7 EMI

2.3

RG-WALL 1600-S3100

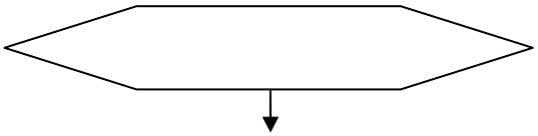

3.3

16A

1)

2)

3 1.5 14AWG

3.4

1)

4.1

Console

admin **firewall**

WAN1 Internet

4-1

4-1

Web

LAN PC IP : https://192.168.1.200

1) DB-9 PC

2) RJ45 Console

PC PC Windows3.1 Terminal Windows

3) < > 4-4

4-3

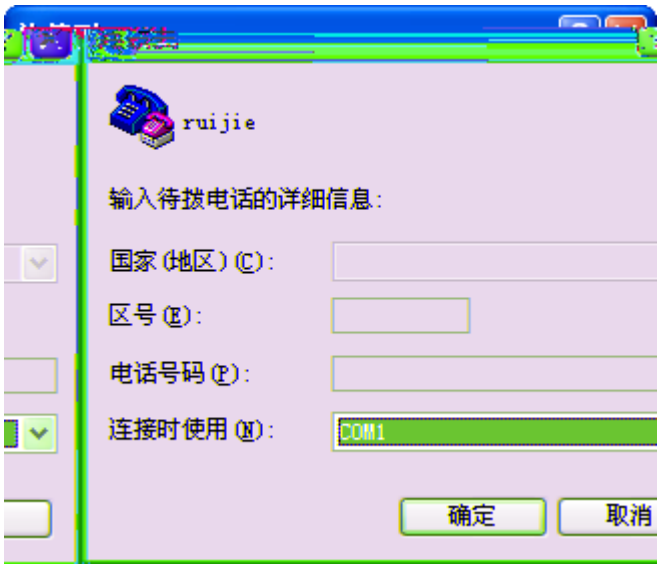

4) . < > 4-5 9600
8 1

4-4

9600 8 1

1)

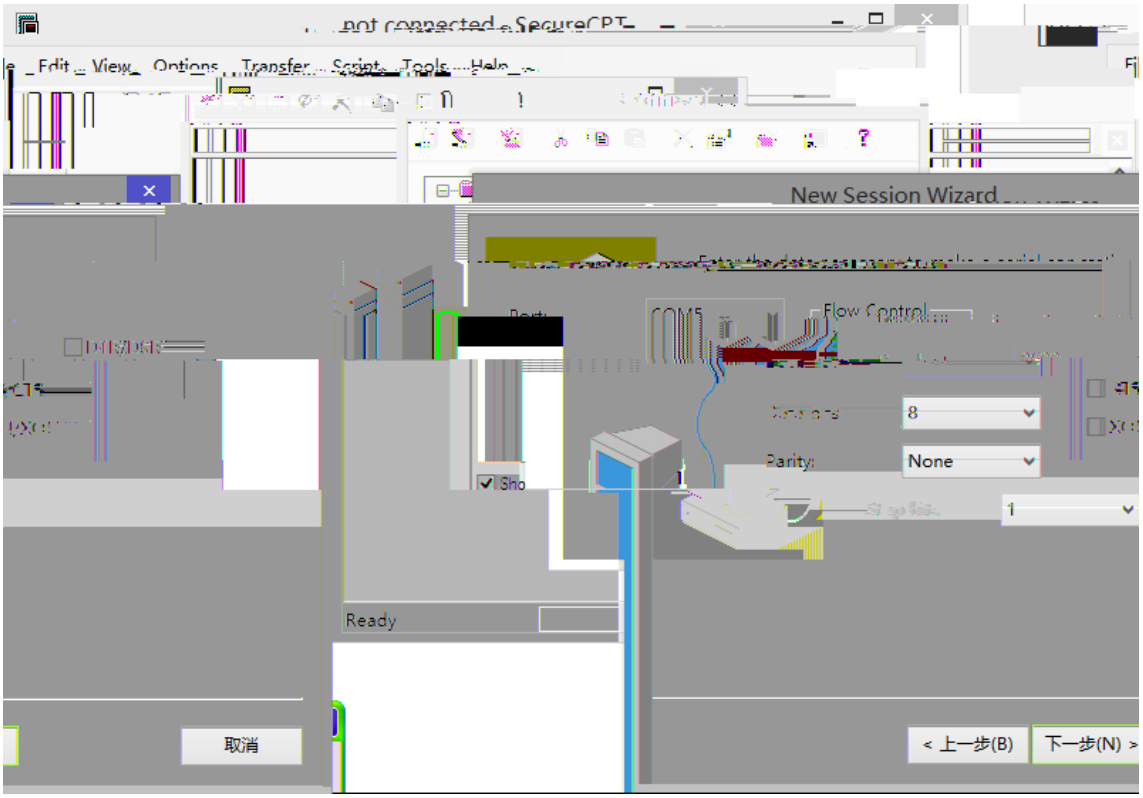
not connected - SecureCRT
Edit View Options Transfer Script Tools Help
New Session Wizard
Flow Control:
8
Parity:
None
1
Ready
取消
< 上一步(B)
下一步(N) >

4-9

3) “ ” < >

4-10 “ ”

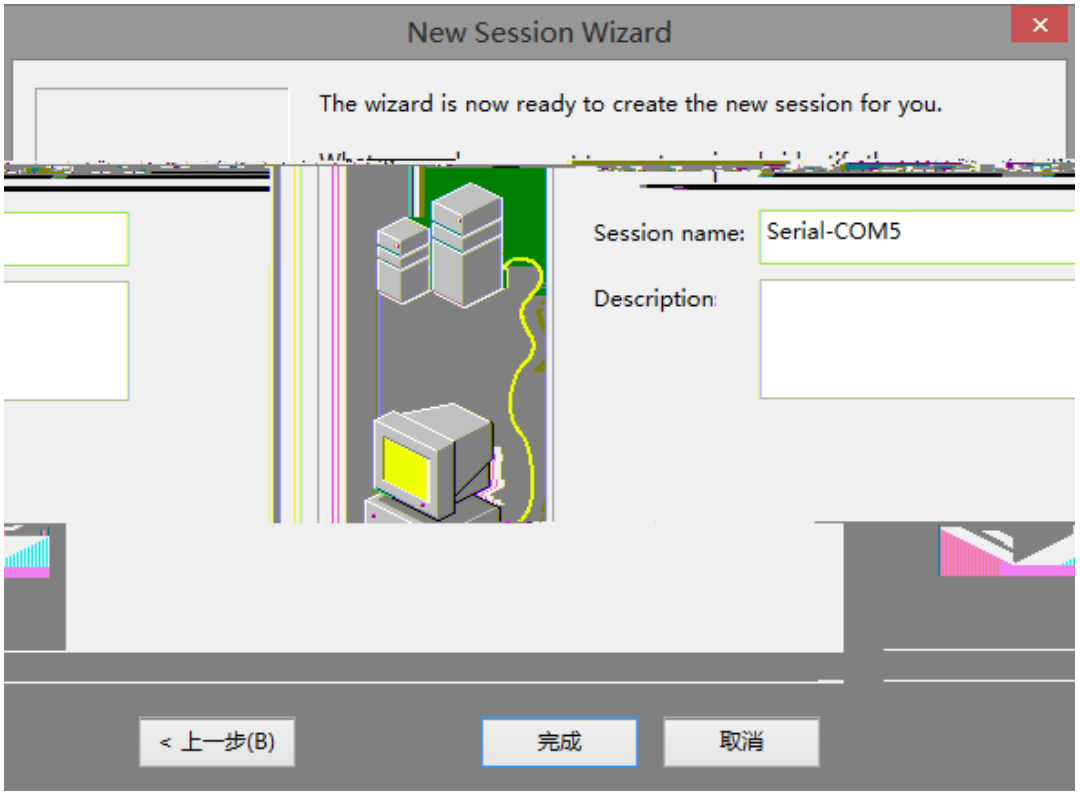
New Session Wizard
The wizard is now ready to create the new session for you.
Session name:
Serial-COM5
Description:
< 上一步(B)
完成
取消

4-10

4) < > 4-11

4-11

3650519024 78

6

6.1

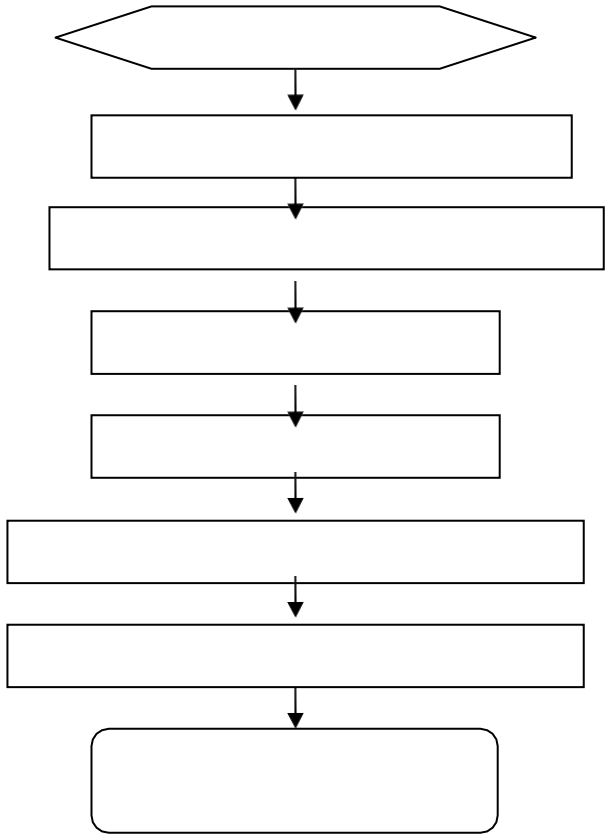

6.2

1

2

Status Power

3

Ǫ 2 ɣ

A

1000BASE-T/100BASE-TX/10BASE-T

1000BASE-T/100BASE-TX/10BASE-T MDI/MDIX Crossover

1000BASE-T IEEE 802.3ab 100-ohm 5 5 UTP STP
100 1000BASE-T 4 4 1000BASE-T

A-1 1000BASE-T

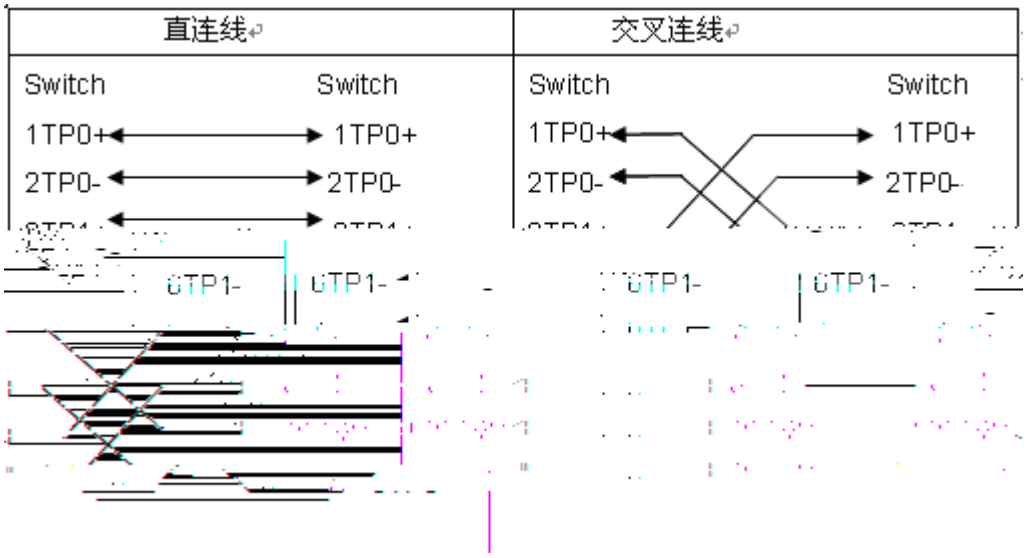

100BASE-TX/10BASE-T 10Mbps 100-ohm 3,4,5 100Mbps
100-ohm 5 100 100BASE-TX/10BASE-T

A-2 100BASE-TX/10BASE-T

Pin	插 座	插 头
1	Input Receive Data+	Output Transmit Data+
2	Input Receive Data-	Output Transmit Data-

100BASE-TX/10BASE-T

A-3 100BASE-TX/10BASE-T

A 4

B

RG-WALL 1600-S3100 19

D-2

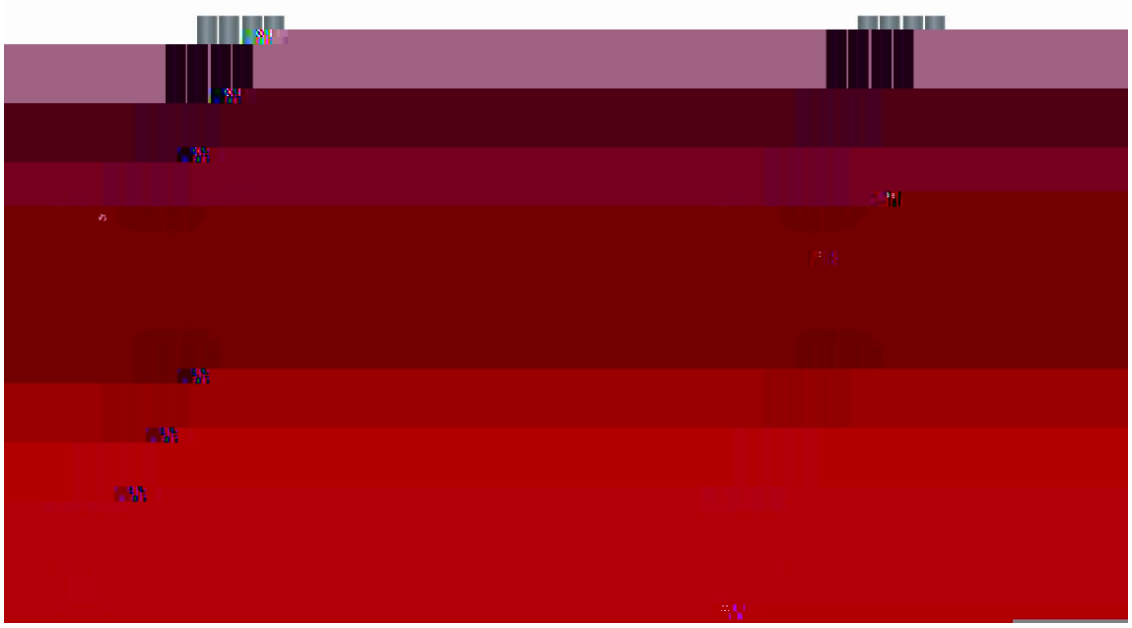

D-3

D-3

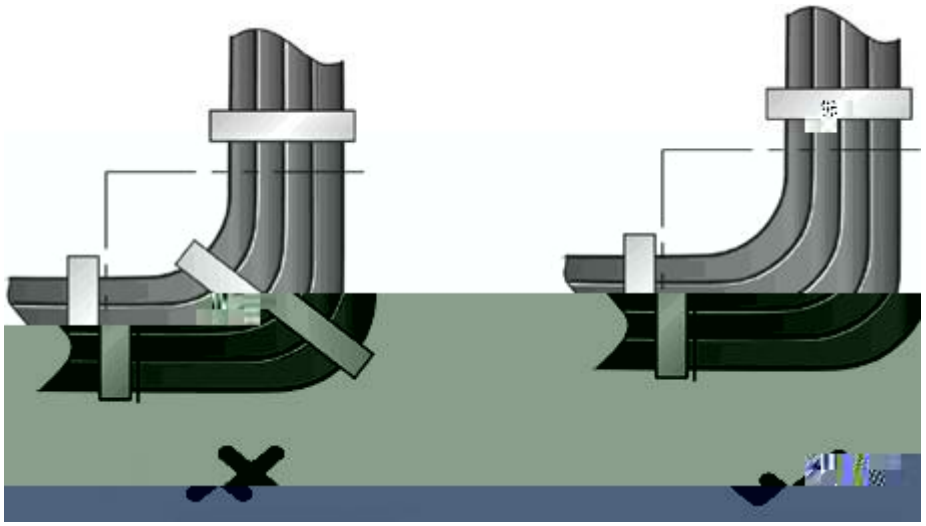

220V -48V

D-4

D-4

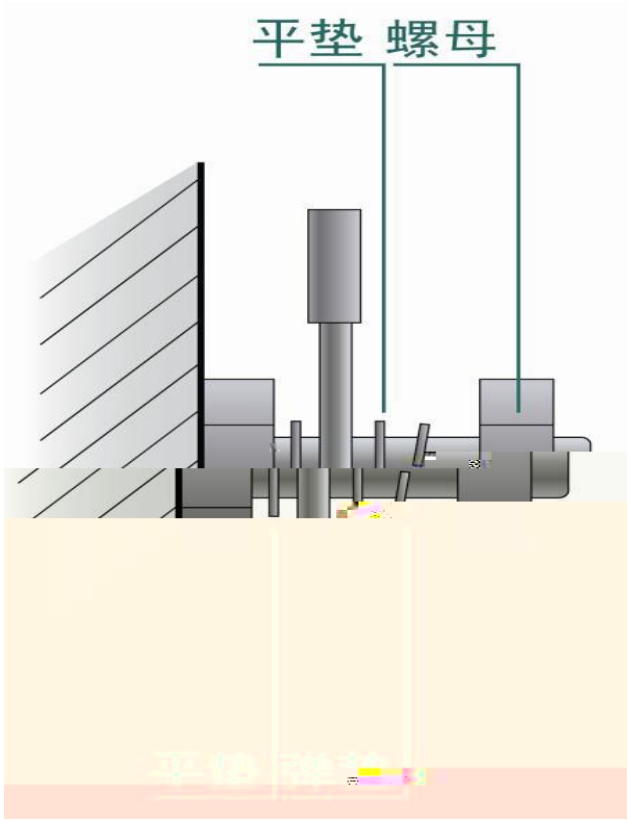

mm	mm
10	80~150
10~30	150~200
30	200~300